


MIP-800A STRETCH FILM APPLICATOR

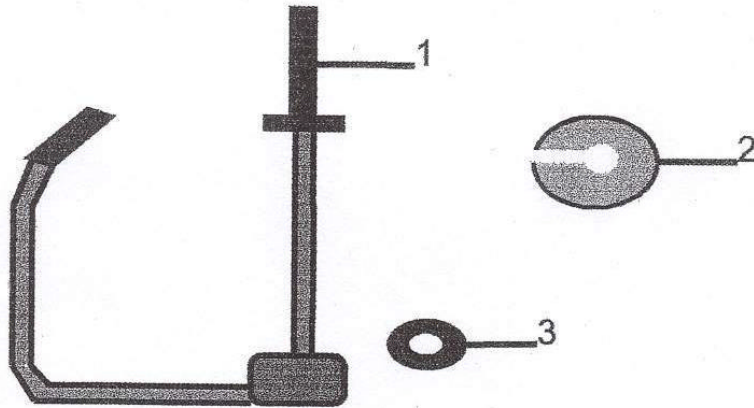

<u>KEY#</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>PART#</u>
1	Handle w/ Threaded Rod	1	M800A-1
2	Slotted Core (metal)	1	M800A-2
3	Bottom Core (black)	1	M800A-3

Reference part number when ordering. Read all operating & safety instructions.

This stretch film applicator is designed to hold any size stretch film from 12" to 20".

OPERATION INSTRUCTIONS

1. Remove the slotted metal core located next to the handle by unscrewing the handle.
2. Adjust the length of the threaded rod to fit the length of the stretch film roll by twisting the handle to the left or right. Always adjust the threaded rod an extra 1/2" longer than the stretch film roll so that the slotted core can fit between the roll and the handle.
3. Slip the stretch film roll over the handle. Slide the slotted core between the stretch film roll and the handle. The slotted core will fit into the bushing attached to the handle. Screw down the handle to apply tension to the film.
4. Stretch the film around your skid or pallet.
5. Remove the stretch film roll by twisting the handle until the slotted core can be removed. Once removed, simply slide the roll upward over the handle and off the stretch film applicator.